

Instruction Manual of Waterproof Kitchen Timer Model TM-36

Read this manual thoroughly before use, and keep it for future reference.



Warnings


- Do not solder, short-circuit, disassemble, or heat batteries. Do not dispose of batteries in a fire.
- When the battery fluid is attached to clothing or skin, rinse it with clean water. If the fluid contacts with eyes, rinse it with water and consult a doctor immediately.
- Keep batteries away from children. If they are swallowed accidentally, consult a doctor immediately.
- Keep batteries insulated with tapes or such to dispose of or store them.



Cautions for Use

- Do not put the device into fire.
- Replace the battery with a new one when it gets exhausted. Failure to exchange it may lead to fluid leakage.
- Do not use the device in extremely high or low temperature.
- TM-36 is designed to be able to handle with wet hands and get a water splash. However, use in a place under water or where water hits it consistently is not advised.
- Do not disassemble, customize, drop, or give a shock to the device.
- To clean the device, wipe it with a dry soft cloth.

Names of Sections

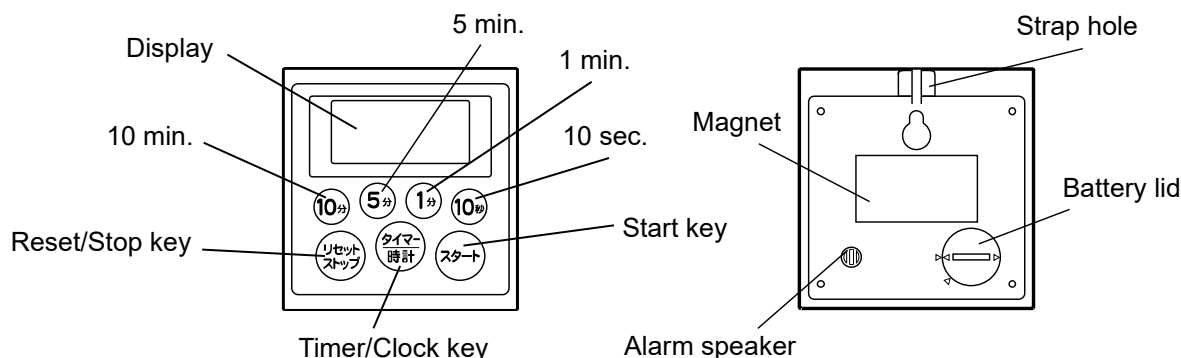

How to Use

• Clock Setup

1. Press [Timer/Clock] to switch to clock mode.
2. Press [Reset/Stop] for 2 seconds. When the hour digits start blinking, press [Start] to fix the hour. Press and hold [Start] to change the figure seamlessly.
3. Press [Reset/Stop] to let the minute digits blink next. Press [Start] to fix the minute. Press and hold [Start] changes the figure seamlessly.
4. Press [Timer/Clock] to finish the setup and show the clock. Touching no keys for 10 seconds also resumes the clock display.

• Countdown timer

1. Press [Timer/Clock] to switch to timer mode, and then [Reset/Stop] to initialize counting.
2. Press number keys to set the countdown time. For example, press [5 min.], [1 min.], [10 sec.], and [10 sec.] again to set as 6 minutes 20 seconds. Press and hold the number key to increase the time length rapidly.
3. Press [Start] to begin a countdown.

4. To pause counting, press [Reset/Stop]. Pressing [Start] during this state resumes the countdown, whereas pressing [Reset/Stop] again cancels counting.
5. The alarm rings for up to 30 seconds when the countdown is complete. Pressing any key can stop the sound, and let the display show the previously set time.

Tip: Switching to clock mode does not stop countdown.


Count-up timer

1. Press [Timer/Clock] to switch to timer mode, and then [Reset/Stop] to initialize counting.
2. Press [Start] to begin a count-up.
3. To pause counting, press [Reset/Stop]. Pressing [Start] during this state resumes the countdown, whereas pressing [Reset/Stop] again cancels counting.
4. The count-up stops when it reaches 99 minutes 59 seconds.

Tip: Switching to clock mode does not stop count-up.

How to Replace Battery

1. Turn the battery lid anticlockwise with a coin or such to open it.
2. Exchange the LR44 alkaline button battery. Pay attention to polarity.
3. Turn the lid clockwise to close it.
4. Dispose of the battery in compliance with local rules and regulations.

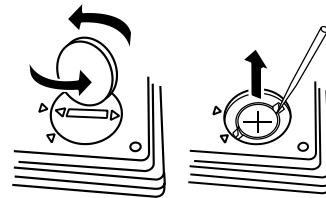

Specifications

Product name	Waterproof Kitchen Timer
Model no.	TM-36
Catalog no.	1709-30
Functions	Countdown timer: 10 sec. to 99 min. 50 sec. with alarm Count-up timer: Up to 99 min. 59 sec. Clock: 12-hour clock with accuracy of ± 30 sec./month Alarm: 2-step sound Intermittent beeps for the first 5 sec., continuous beep later
Waterproof rating	IPX4
Power	LR44 alkaline button battery x 1
Battery life	Approx. 1 year if alarm rings for 15 sec. once a day Attached batteries are for test purpose and may last shorter.
Material	ABS resin
Dimensions	77 (W) x 79 (H) x 11 (D) mm
Weight	50 g including a battery
Accessories	LR44 alkaline button battery x1, strap for hanging x1

Specifications and appearance are subject to change for improvement.

Warranty Policy

Our products are warranted to be free from defects in materials and workmanship for a period of one year from date of delivery. If repair is necessary and has not been the result of misuse, force majeure, or transportation arranged by yourself within the one-year period, please return the products on freight prepaid basis. Correction of the defect will be made without charges. We alone will determine if the product problem is due to deviations or customer misuse. Out-of-warranty products will be repaired for a fee. Before returning, request for our acknowledgement first.

For details, contact us or a retailer from which you have purchased.

SATO KEIRYOKI MFG. CO., LTD.

3-4, Kanda-kajicho, Chiyoda-ku, Tokyo 101-0045, Japan

<https://www.sksato.co.jp/en/>

As of Jun. 2023