

Instruction Manual

No. 1021-00 Thermometer Model T-100

This instrument is designed to measure indoor temperature by being mounted on a wall.


Do not use this instrument for any other purposes.

Be sure to read this instruction thoroughly before using.

Keep this instruction manual in a secure place for future references.

How to use

- Install T-100 at the level of the user's eyes.
- To mount on a wall, use the hook hole on the back shown in the right.
- After unpacking or relocation, wait for 30 minutes until the reading becomes accurate.

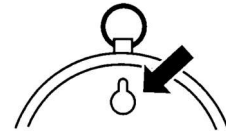

Cautions

- T-100 is a precision instrument. Do not drop or apply impact to it, or it may result in malfunction.
- Do not expose to direct sunlight, water, air flow such as from an air conditioner, or vibration.
- Do not use in an atmosphere out of measuring range.
- To clean the unit, wipe with a dry soft cloth.
- This instrument is not intended for
- Recalibration per year is recommended.

Specifications

Product/model name:	No. 1021-00 Thermometer Model T-100
Measuring range:	Temperature -30 to 50°C
Accuracy:	±2°C
Material:	ABS resin (case), aluminum (front cover), acrylic glass (window)
Dimensions:	101 mm diameter x 32.5 mm depth
Weight:	60.5 g

Warranty Policy

Our products are warranted to be free from defects for one year from the date of delivery. If repair becomes necessary within this period, return the products to us on freight prepaid basis. We shall repair without fees if the defect is not a result of misuse, force majeure, or transportation arranged not by us. Note that we alone determine the cause of the defect. Out-of-warranty products can be repaired for a fee if requested.

Before returning, request for our acknowledgement first.

For details, contact us or a retailer from which you have purchased.

SATO KEIRYOKI MFG. CO., LTD.

3-4, Kanda-kajicho, Chiyoda-ku, Tokyo 101-0045, Japan

<https://www.sksato.co.jp/en/>