

# ***Instruction Manual***

## ***Bimetal Thermometer for Compost***

Thank you for purchasing Bimetal Thermometer for Compost

- This product is designed to measure compost temperature. Do not use it for other purposes.
- Read this manual thoroughly before using the bimetal thermometer. Keep the manual in a safe place for future references whenever necessary.


### **Specifications**

Product	: No. 1407-00 Bimetal thermometer for compost
Measuring range	: 0 to 120°C
Min. Graduation	: 2°C
Accuracy	: ±2°C
Materials (Case and stem)	: Stainless Steel (SUS 304)
Dimensions	: Dial dia. : 80mm Sensing Stem : 8mm dia. x 900mm (L)

### **Measurements**

Insert the sensing stem into the target to the mark (about 200mm from the end) at least.

### **Name of Section**

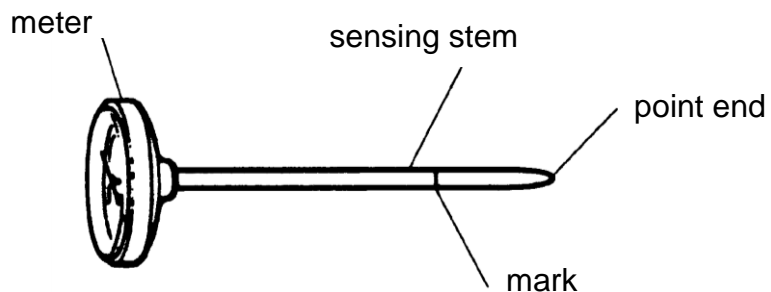

### **Cautions**

For your safety and proper use, be sure to observe the following:

- Never disassemble or alter the thermometer, which may cause malfunctions.
- Do not drop, bent or apply shock to the thermometer. Otherwise, malfunctions may occur.
- Never use the bimetal thermometer out of the measurement range (0 to 120°C).
- Do not alter, bend or bind the sensing stem, as doing so may break or damage the thermometers.
- To prevent injury, be careful of the sharp tip of the sensing stem especially when cleaning the stem after measurements.

### **Maintenance**

For accurate measurements, it is desirable to make sure the accuracy of the bimetal thermometer in comparison with the standard thermometers once a year.

**SATO KEIRYOKI MFG. CO., LTD.**

3-4, Kanda-kajicho, Chiyoda-ku, Tokyo 101-0045 Japan

URL: <http://www.sksato.co.jp/english/>