


This instrument is designed to measure indoor temperature and humidity. Do not use it for other purposes. Read this manual thoroughly before use, and keep it in a secure place for future reference.

Precautions on use

- Install the unit at the level of the user's eyes.
- After unpacking or moving, wait about 30 minutes before the correct value is indicated.

Cautions

- This is a precision instrument. Do not drop or apply impact to it. Doing so may result in malfunction.
- Do not expose to direct sunlight, rain, or wind from an air conditioner or a heater.
- Mount the unit on a perpendicular wall that is free from vibrations.
- Clean the unit with a dry soft cloth when it gets dirty. Never use thinner, benzene or alcohol.
- Be sure to use the unit within the measuring range.
- This instrument cannot be used for certificate purpose
- It is advised to check the reading error with a reliable thermohygrometer once a year.

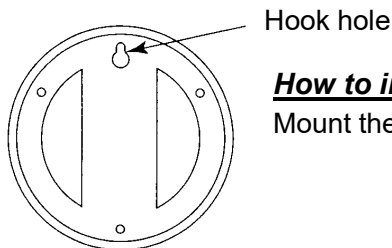

How to install the unit

Mount the unit vertically to the ground by the hook hole on the back shown in the left.

Specifications

Product Name	No. 1412-00 Hygrothermometer Melody	
	Temperature	Humidity
Measuring range	-30 to 50°C	20 to 100%rh
Graduation	2°C	5%rh
Accuracy	±2°C	±5%rh (40 to 70%rh within 15 to 25°C), ±8%rh (other)
Material	Aluminum (Case), Glass (Window)	
Dimensions	150 mm dia. x 32mm depth	
Weight	140 g	

Limited warranty

- (1) Should your thermohygrometer cease to function even used properly in accordance with the instructions on the manual, we will repair or replace the unit free of charge for up to one year after the date of purchase.
- (2) In the following cases, you will be charged for repair services even during the warranty period:
 - a. Faults ascribed to abuse, misuse, or carelessness in handling the product.
 - b. Faults due to casualties such as fires, earthquakes, floods, or thefts.
 - c. Faults ascribed to any unauthorized repairs or modifications.
 - d. Changes in appearance such as scratches caused during use.
 - e. Replacement of expendable supplies or accessories.

For details, contact us or a retailer from which you have purchased.

SATO KEIRYOKI MFG. CO., LTD.

3-4, Kanda-kajicho, Chiyoda-ku, Tokyo 101-0045, Japan

<https://www.sksato.co.jp/en/>